

Arisaka Vertical Grip Picatinny Installation Guide

12/01/2024

Patent Pending

1. Insert a 7/64" Allen wrench into the hole on the bottom of the Vertical Grip and engage the socket cap screw.
2. Turn the Allen wrench **clockwise** to draw the recoil lug fully into the Vertical Grip.
3. Slide the Vertical Grip onto the Picatinny rail to the desired position.
4. Center the Vertical Grip on the Picatinny slots as shown below.
5. Slowly turn the Allen wrench **counter-clockwise** to extend the recoil lug into the Picatinny rail.
6. It will take 5-6 full revolutions for the recoil lug to bottom out. Torque to no more than **15 inch lbs.**
7. If the recoil lug bottoms out after only 1-2 turns of the Allen wrench, then the Vertical Grip must be repositioned according to step #4.

